



The World's Leading Manufacturer
of Corrugated Polycarbonate Building Panels

DO IT YOURSELF COMMERCIAL INDUSTRIAL ARCHITECTURAL AGRICULTURAL HORTICULTURAL

Suntuf Installation

MAIN PAGE

PRODUCTS

APPLICATIONS

INSTALLATION

SPECIFICATIONS

WARRANTIES

FAQ


ABOUT PALRAM

CONTACT US

As Seen on
the Home and
Garden TV
Network...

It is recommended to start the first panel in the middle of the framing and then work outwards in both directions.

Click on the Letters for a detailed drawing of that area.

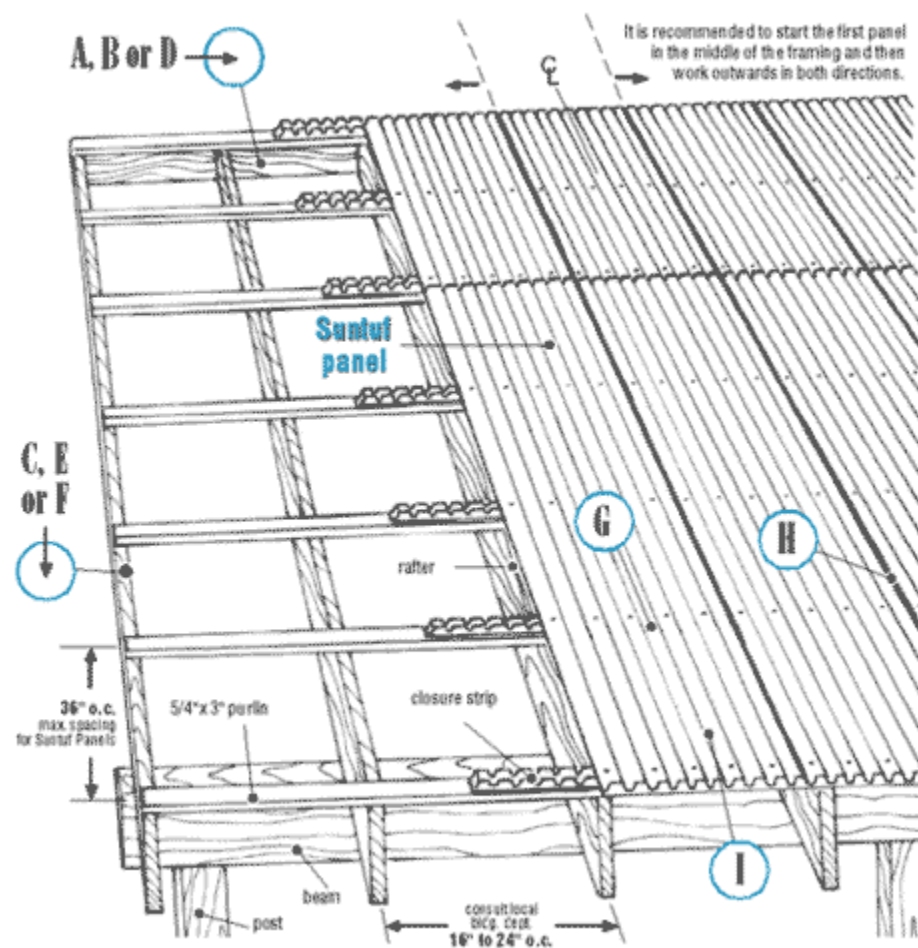

TYPICAL CANOPY FRAMING DETAIL

List of *Detailed Drawings*

A [Head Flashing](#) at Masonry Wall

B [Head Flashing](#) at Sided Walls

- [C Sidewall Flashing](#) at Sided Walls
- [D Ridge Cap Flashing Detail](#)
- [E Side Ridge Flashing Detail](#) at Sided Walls
- [F Rake Detail](#)
- [G Overlap Detail](#)
- [H Detail At Seam](#)
- [I Bottom Closure Detail](#)

Return to [Main Page](#)



Copyright © 2004 Palram Americas. All Rights Reserved.